



OFDA Sound System Audio Instructions – Quick Reference

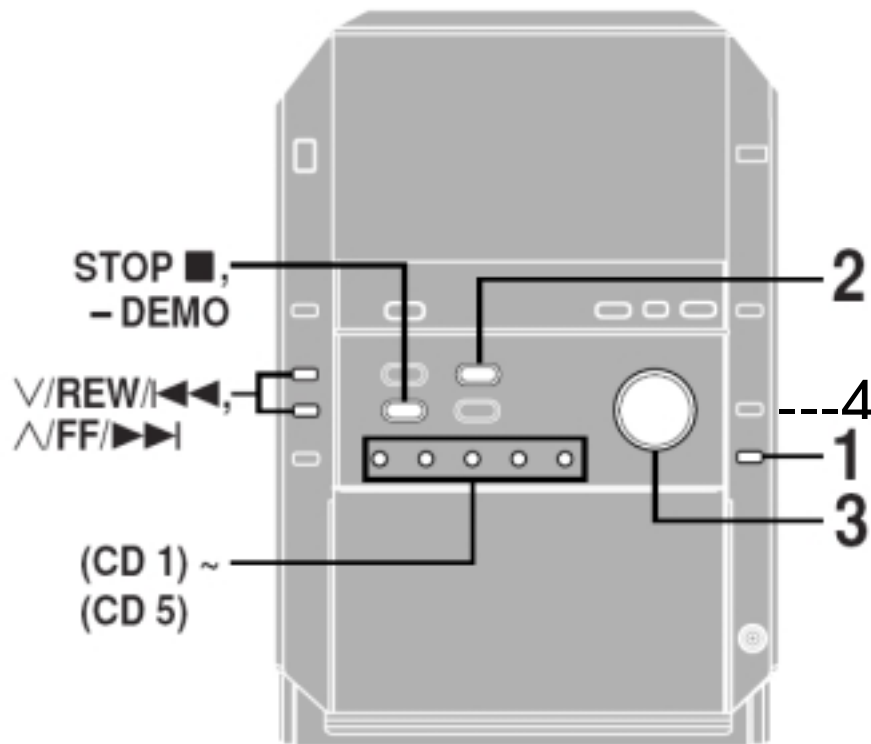

1. **set up equipment:** Plug in power cord. Attach white plastic connectors from speakers to back of unit (match up black lines)
2. **load cd(s):**
 - choose a cd tray (1 – 5) and press its button
 - press open/close button [**▲** open/close], button #1 on the right side of diagram.
 - insert cd on the disc tray
 - press open/close button again

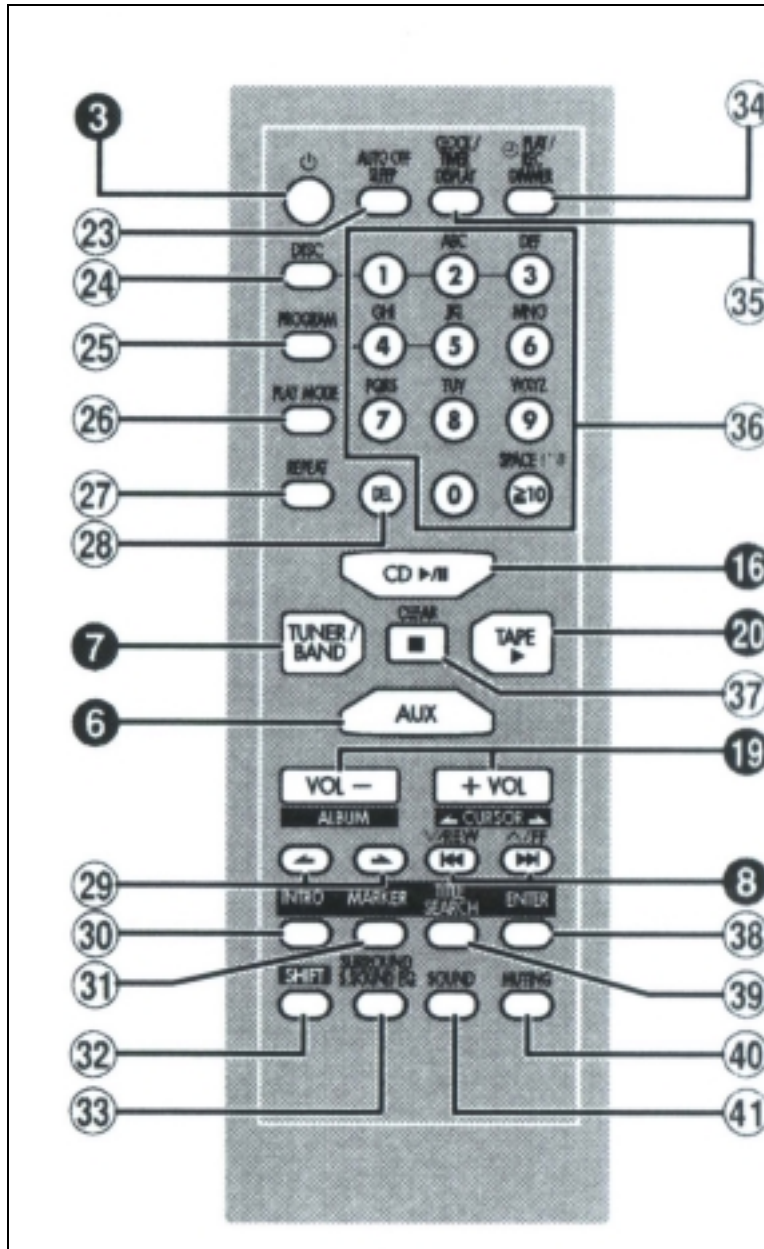

3. select play mode:

Using remote handset, press Play Mode button, button 26, until "1 TRACK" appears in the player's display screen

4. select track: Note: If there is more than one cd loaded, first select the disc you want to play, using the cd selection buttons on the main unit or by pressing button 24 on the remote until the disc tray you want is highlighted on the front panel of the main unit.

- using the remote handset, press the numeric buttons to select a track,-
- for two digit numbers, press [> 10] once, then the two digits
- for three digit numbers, press [> 10] twice, then the three digits
- the title of the dance will flash on the screen of the unit and the dance will start to play immediately

5. manoeuvring: to skip to beginning or end of a track

- pause play[CD ▶/II],button 16.
- if you don't pause play, the track will immediately start to play either the same piece, or the next, depending on whether you skip to the beginning or end of the track).
- skip track forward[∧/FF/▶▶] or backward, [∨/REW/◀◀], button 8

6. to change one cd while another is playing:

- press (▲ CD CHANGE) button 4 on the main unit pictured above.
- press cd selection button
- press (▲ CD CHANGE) again to close tray

Notes

